


A200- Fascia trim

Application instructions


The A200 is compatible with C1, C2 & C4 universal corners and is designed to fit the profile of a B260 when used on an adjoining edge. The A200 is a drip trim, fitted to the lowest edge of the roof usually where the rainwater flows into the gutter. The batten for the A200 should be doubled up to provide a stand off for the gutter to fit behind the trim, with the outer batten 10mm lower than the inner batten to allow for the radius of the trim. Apply trim adhesive to the batten in 30mm beads at 300mm centres, rub the trim into place and nail to the decking. DO NOT NAIL THROUGH THE FRONT OF THE TRIM. Where the trims are over-lapped, they should be bonded together with a thin strip of PU adhesive on the inside of the overlapping trim. If the pitch of the roof is only minimal, rainwater is likely to hold behind the trim. Use a planing machine to take 2mm off the deck to allow the trim to lay flush with the board.

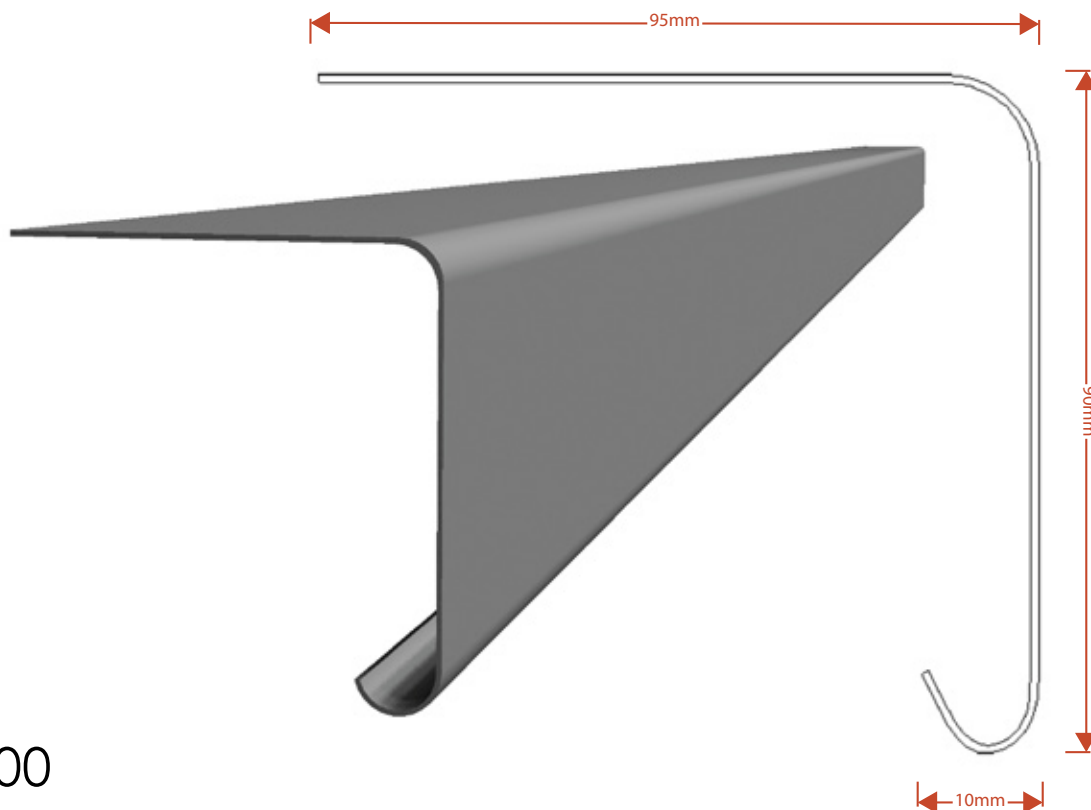

A200

A200 typical application

If the roof is not laid to a fall, the decking should be rebated to ensure a flush finish.

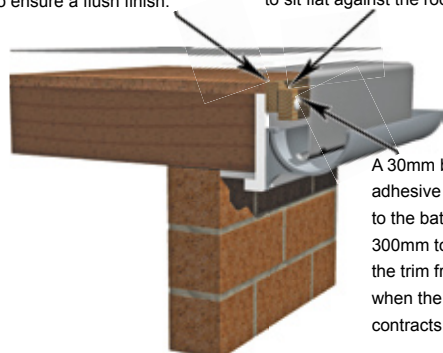

The second batten is fixed 10mm lower than the first to allow the A200 to sit flat against the roof.

A 30mm bead of PU adhesive is applied to the batten every 300mm to prevent the trim from rising when the substrate contracts.

